

4.2 Coupling inspection



BEFORE YOU BEGIN

Isolate the equipment and verify a safe condition before accessing the coupling.

Inspect the coupling and the yellow guard for visible damage. Refit the guard after inspection.

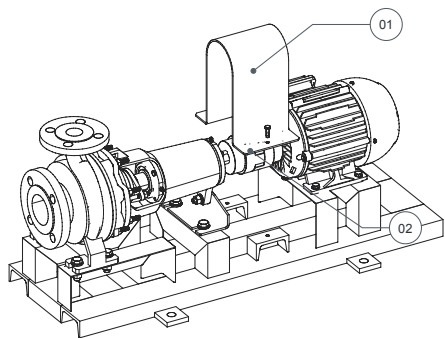


Figure 4-2. Coupling and removable guard

01. Remove the guard

With the equipment isolated, expose the coupling.

02. Inspect the coupling

Check the coupling and guard for visible damage.

03. Refit the guard

Refit after inspection and record the findings.

Table 4-1. Inspection reference

Ref.	Component	Check
01	Coupling guard	Condition and fit
02	Coupling	Visible damage

Reference: CP200-GD · rev B · Detail 1