CP-200 / 04 MAINTENANCE PROCEDURES

4.2 Coupling inspection

> **BEFORE YOU BEGIN**
> Isolate the equipment and verify a safe condition before accessing the coupling.

Inspect the coupling and the stainless-steel guard for visible damage before refitting.

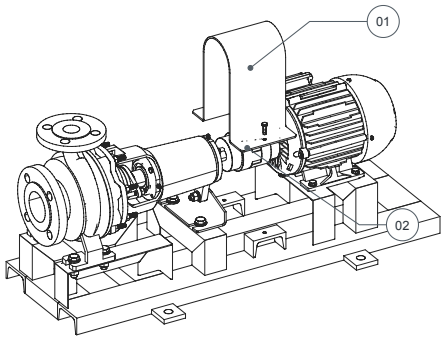


Figure 4-2. Coupling and removable guard

01. **Remove the guard**
With the equipment isolated, expose the coupling.

02. **Inspect the coupling**
Check the coupling and guard for visible damage.

03. **Refit the guard**
Refit after inspection and record the findings.

Table 4-1. Inspection reference

Ref.	Component	Check
01	Coupling guard	Condition and fit
02	Coupling	Visible damage

Reference: CP200-GD · rev C · Detail 1